

Date  
Serial No.

		<b>** /10</b>	<b>** /13</b>	<b>** /20</b>
		<b>Part</b>	<b>Part</b>	<b>Part</b>
		<b>Number</b>	<b>Number</b>	<b>Number</b>
1.1	Casing, 1 <sup>st</sup> stage	1	40443	40444
1.2	Casing, 2 <sup>nd</sup> stage	1	40445	40446
2.1	Port plate, suction side	1		
2.2	Port plate, discharge side	1		
3.1	Impeller, 1 <sup>st</sup> stage	1	40447	40448
3.2	Impeller, 2 <sup>nd</sup> stage	1	40449	40450
5.1	Mechanical seal, drive side	1		
5.2	Mechanical seal, non drive side	1		
6.1	Casing-plate gasket	2		
6.3	Interstages gasket	4		
10.1	Bearing housing	1	40388	40388
10.2	Bearing housing	1	40388	40388
11	Shaft	1	40451	40452
12	Bearing	2		
13	Bearing cover d.e.	1	40393	40393
14	Bearing cover i.e	1	40394	40394
16	Screw	4		
18.1	Impeller key, 1 <sup>st</sup> stage	1		
18.2	Impeller key, 2 <sup>nd</sup> stage	1		
19	Coupling key	1		
22	Bearing nut	1		
24	Screw	4		
26	Plug	5		
27	Plug	2		
31	Impeller nut	1		
34	Coupling guard	1	40397	40397
50	Suction casing	1	40398	40399
51	Discharge casing	1	40400	40401
52	Central port plate	1	40402	40403
53	Impeller space			