

			**/10 Part Number	**/13 Part Number	**/20 Part Number
1.1	Casing, 1 st stage		1		
1.2	Casing, 2 nd stage		1		
2.1	Port plate, suction side		1		
2.2	Port plate, discharge side		1		
3.1	Impeller, 1 st stage		1		
3.2	Impeller, 2 nd stage		1		
5.1	Mechanical seal, drive side		1		
5.2	Mechanical seal, non drive side		1		
6.1	Casing-plate gasket		2		
6.3	Interstages gasket		4		
10.1	Bearing housing		1		
10.2	Bearing housing		1		
11	Shaft		1		
12	Bearing		2		
13	Bearing cover d.e.		1		
14	Bearing cover i.e		1		
16	Screw		4		
18.1	Impeller key, 1 st stage		1		
18.2	Impeller key, 2 nd stage		1		
19	Coupling key		1		
22	Bearing nut		1		
24	Screw		4		
26	Plug		5		
27	Plug		2		
31	Impeller nut		1		
34	Couplingf0 0 0 scn-37.8723 -1.10.30Tm(2 reW nBT5.(PI1.17 -1c412 reW nBT5.64 0 0 5.64 148.4664 326.04 Tm8)TJETBT5. TD(1)Tj29.5319 -1.1702 TD.0851 TD16(f0 0 0 scn-37.8723 -1.10.				